

 










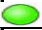




## Cisco 7965







## Cisco 7816



	Feature	Function
1	Programmable buttons	Depending on configuration, programmable buttons provide access to:
		<ul style="list-style-type: none"> <li>• Phone lines (line buttons)</li> <li>• Speed-dial numbers (speed-dial buttons, including the BLF speed-dial feature)</li> </ul>

		<ul style="list-style-type: none"> <li>• Web-based services (for example, a Personal Address Book button)</li> <li>• Phone features (for example, a Privacy button)</li> </ul> <p>Buttons illuminate to indicate status:</p> <ul style="list-style-type: none"> <li> <b>Green, steady</b>—Active call or two-way intercom call</li> <li> <b>Green, flashing</b>—Held call</li> <li> <b>Amber, steady</b>—Privacy in use</li> <li> <b>Amber, flashing</b>—Incoming call</li> <li> <b>Red, steady</b>—Remote line in use (shared line or BLF status)</li> </ul>
2	Footstand adjustment	Allows you to adjust the angle of the phone base.
3	Display button	Awakens the touchscreen from sleep mode or disables it for cleaning.
		 No color—Ready for input  Green flashing—Disabled  Green steady—Sleep mode
4	Messages button	Auto-dials your voice message service
		
5	Directories button	Opens/closes the Directories menu. Use it to access call logs and directories
		
6	Question "?" button	Activates Help Menu
		
7	Settings button	Open/Closes the Settings menu. Use it to change phone screen and ring settings
		
8	Services button	Open/Closes the Services menu
		
9	Volume button	Controls the handset, headset, and speakerphone volume (off hook) and the ringer volume (on hook).
		
10	Speaker button	Toggles the speaker on and off. When the speaker phone is on, the button it lit.
		

		
11	Mute button	Toggles mute on and off.
		
12	Headset button	Toggles the headset on and off.
		
13	4 Way Navigation pad and Select button (center)	Allows you to scroll through the menus and highlight items. Use the Select button to select an item that is highlighted on the screen.
		Navigation Button
14	Keyboard	Allows you to dial phone numbers, enter letters, and choose menu items.
15	Softkey buttons	Each activates a softkey option (displayed on your touchscreen)
16	Handset light strip	Indicates an incoming call or new voice message.
17	Phone Screen	Show Phone Features

## Expansion Module



187196